

GUILLOTINE

X / M


Instructions and Safety Manual




Read and follow all safety warnings and instructions in this manual.
Retain instructions and safety manual for future reference.

6

Attach the shoulder sling to the sling studs. Loosen the spring loaded thumb screw on the swivel and then press it to unlock the latch. Hook it onto the stud under the stock and then tighten down the thumb screw to secure the latch.

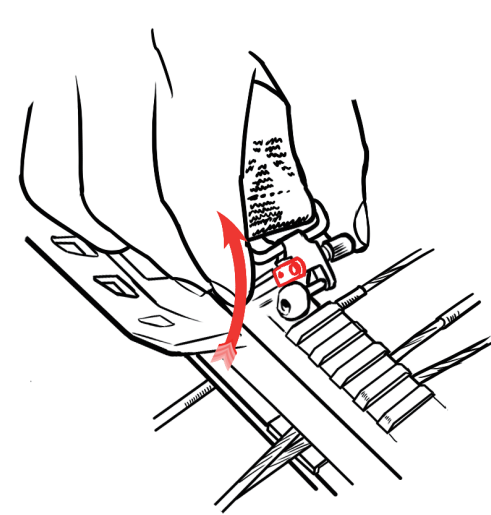


STEP 6-1

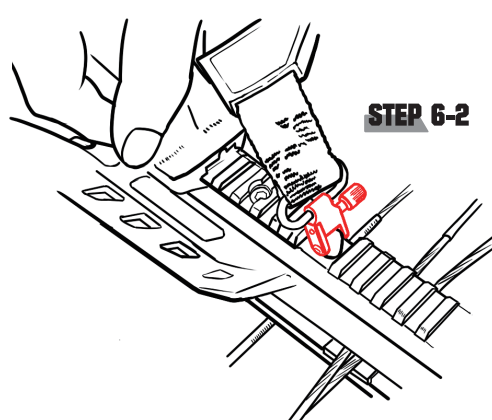

STEP 6-2



STEP 6-3

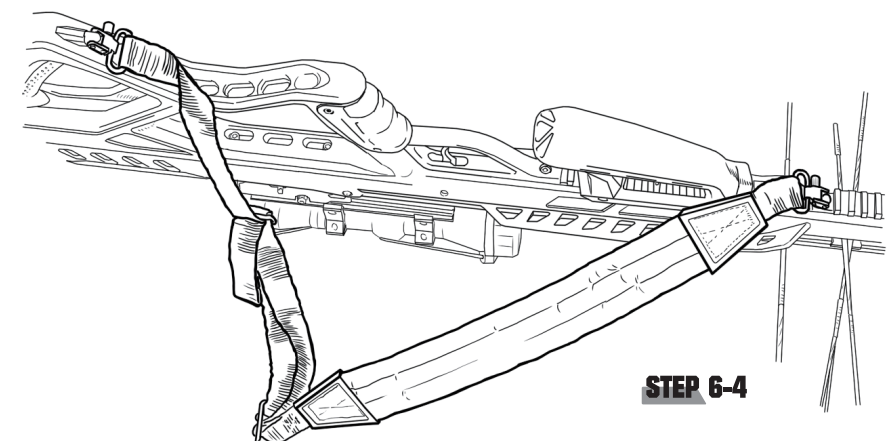

STEP 6-4


● Be sure that the bow unit is secured tightly before engaging crossbow. Assembly bolts may need to be retightened periodically after use.

GUILLOTINE CROSSBOW INSTRUCTION MANUAL


Thank you for the purchase of your new Guillotine crossbow! This crossbow has been engineered to be high speed and lightweight. It has been designed, manufactured and tested for safety and performance when used in accordance with the instructional materials provided. Before you begin the assembly of your crossbow, please check and make sure the following components and accessories are fully included in the box.

- 1.Assembled Riser
- 2.Quick Detach Quiver
- 3.Quiver Mounting Hardware Pack
- 4.Assembly Hardware Pack
- 5.Rope Cocker
- 6.Lubewax
- 7.4 x 20" Carbon Fiber Arrows/100 grain practice points
- 8.4 x 32 Scope
- 9.Padded Shoulder Sling

Guillotine X

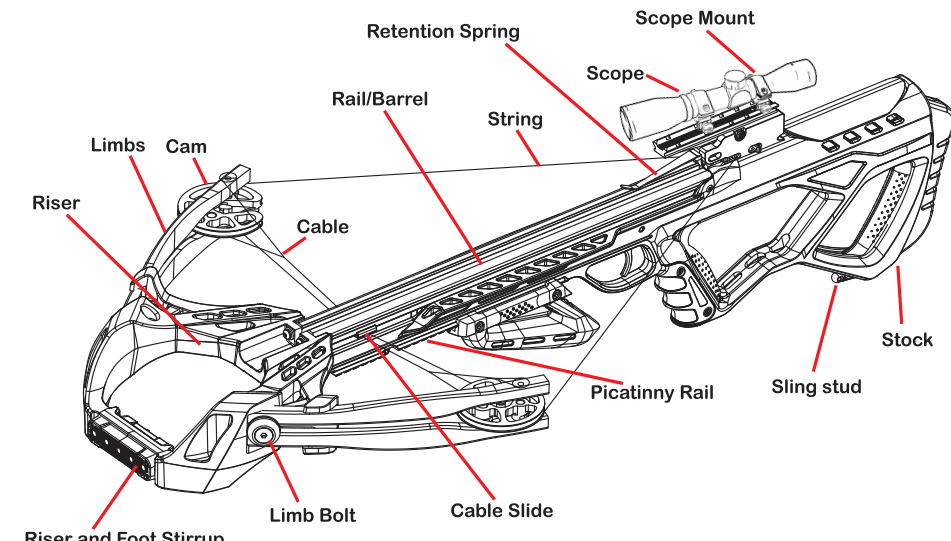

Guillotine M

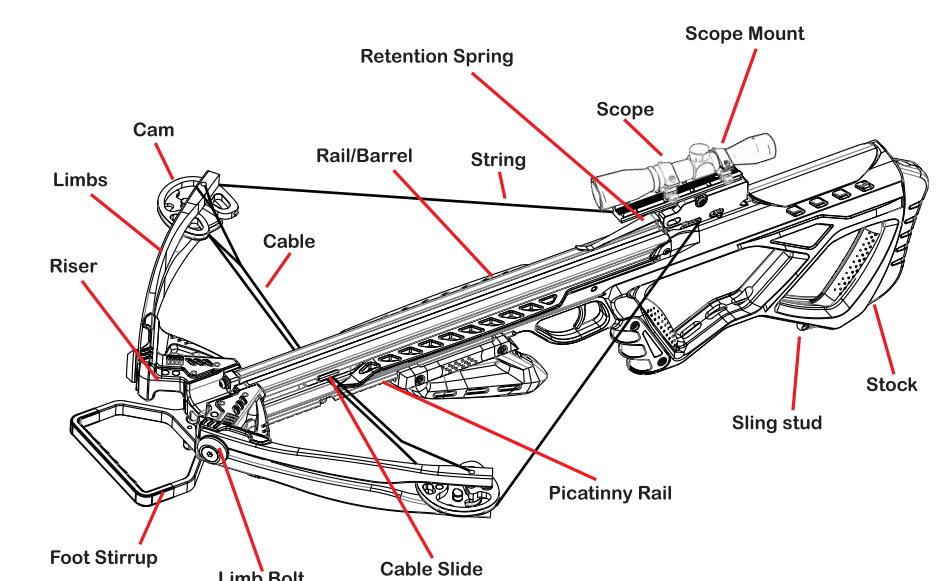


Crossbow Operation


1 Using the rope cocker

Be sure to apply the lubewax to the string including the center serving, cables and the flight track before cocking.

Make sure the trigger's safety is in the "Fire" position before cocking your crossbow, otherwise the string latch will not engage or hold the bowstring. Place the trigger safety into the "Fire" position, and then place the center of the cocking rope in the rope groove. Set the foot stirrup on the ground with one foot in the stirrup and stock end resting against your thigh. For the maximum pull force, place the cocker "hooks up", not hooks down, then pull with even force. Be sure the hooks must stay against the flight rail during cocking operation. Pull the rope until it locks into the trigger mechanism with an audible click and the safety is back in the "Safe" position. The crossbow is now cocked, ready for loading. Do not use your hand or the rope cocker to uncock the crossbow as it may cause serious injury to the user or damage to the crossbow.

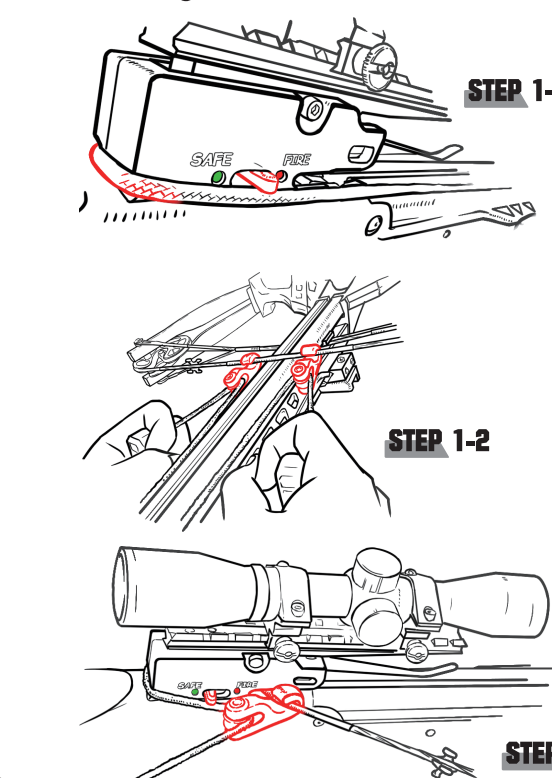

STEP 1-1

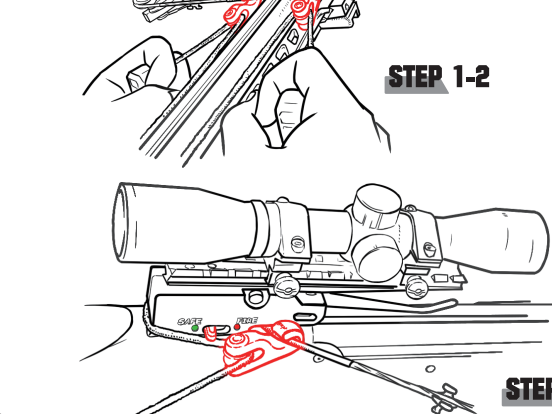

STEP 1-2




STEP 1-3

9

2 Loading the bolt


Place the bolt odd colored fletch in the flight groove and the half moon shaped nock is parallel to the string. Slide the bolt under the retention spring and fully into the trigger mechanism against the string. Switch the trigger safety to "Fire" position again and you are now ready to aim and shoot.

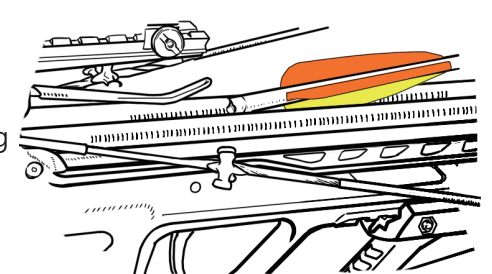

WARNING

To avoid any injuries to yourself or others, or damage to your crossbow, the following safety instructions should be followed at all times.

Never allow your fore-grip hand's fingers or thumb to move above the barrel's flight deck or into the bowstring or cables' release path. Keep your hand fingers in a safe position every time you shoot the crossbow.

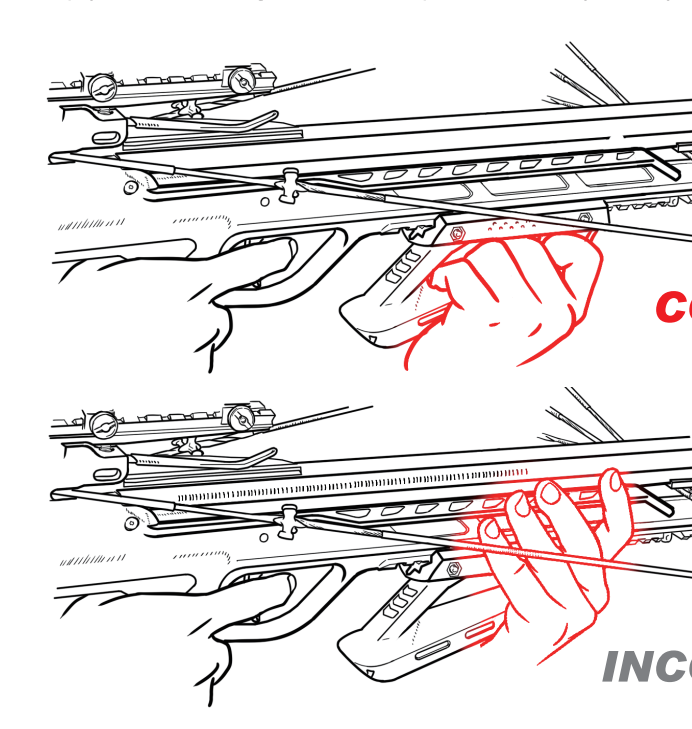


CORRECT

INCORRECT

10


Assembly Guide

1 Attach cable slide to cables as shown.

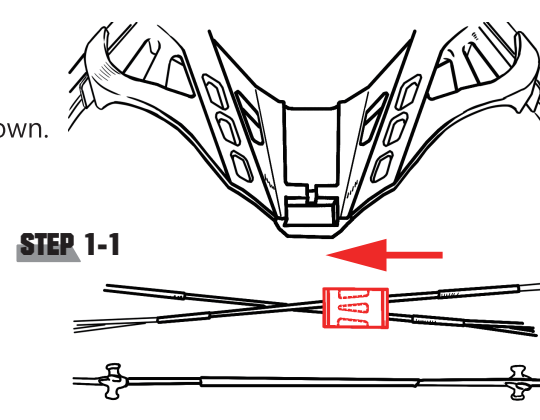


STEP 1-1

2 Lubricate and insert the cable slide under the rail.

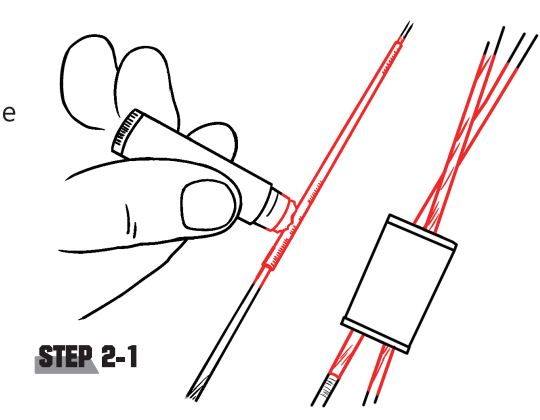


STEP 2-1

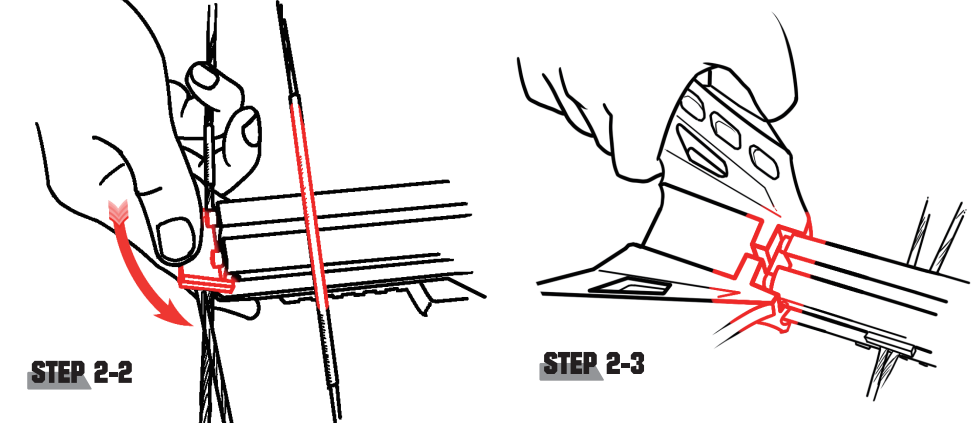

3

STEP 2-2

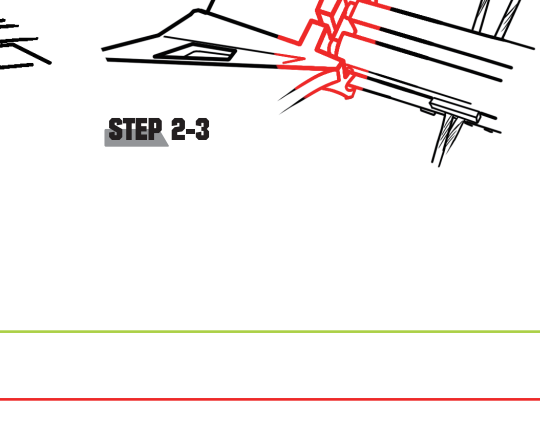

STEP 2-3


3 Assemble the riser onto the barrel by using the bolts as shown after the cable slide and bowstring are properly positioned. Turn the riser and tighten the screw at the back.




STEP 3-1




STEP 3-2

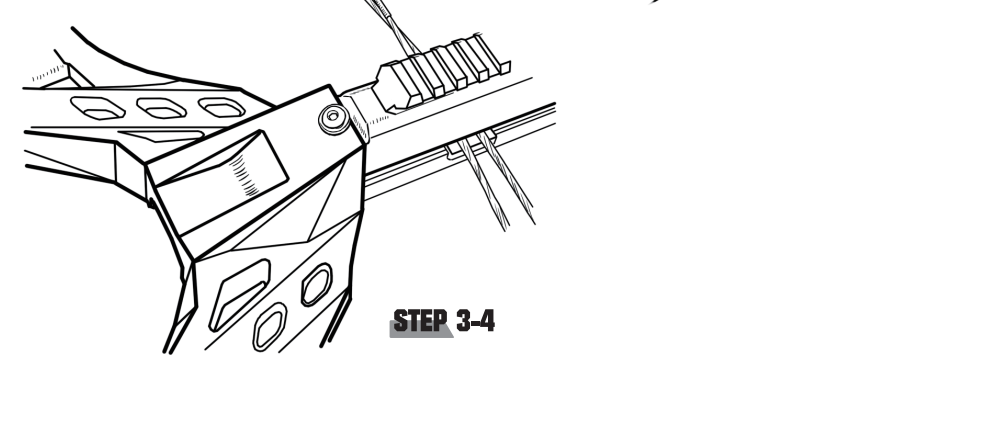


STEP 3-3




STEP 3-4




STEP 3-5

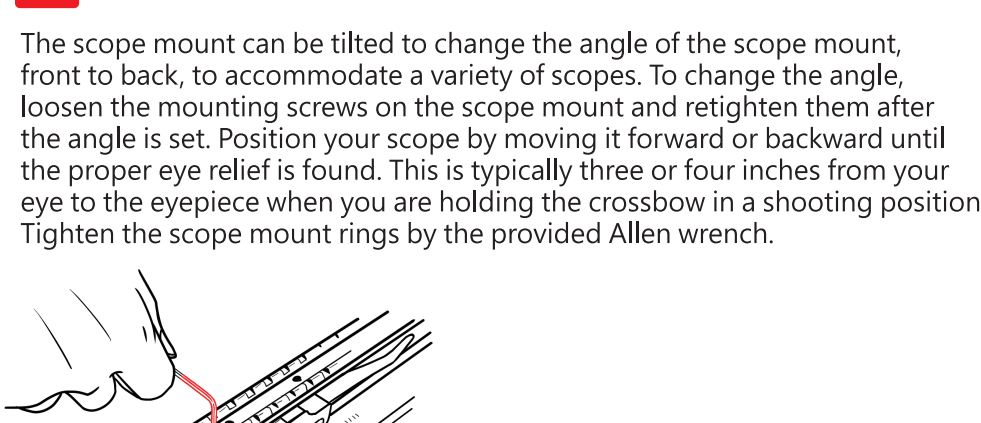


STEP 3-6

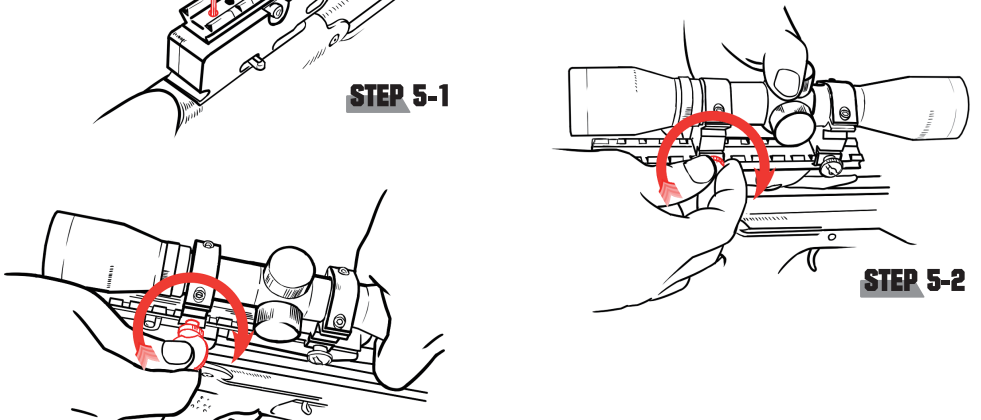

STEP 3-7

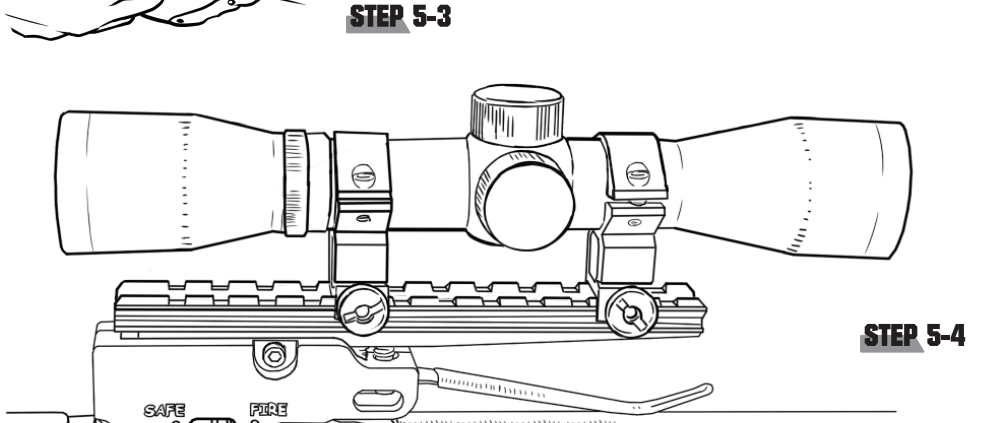

STEP 3-8

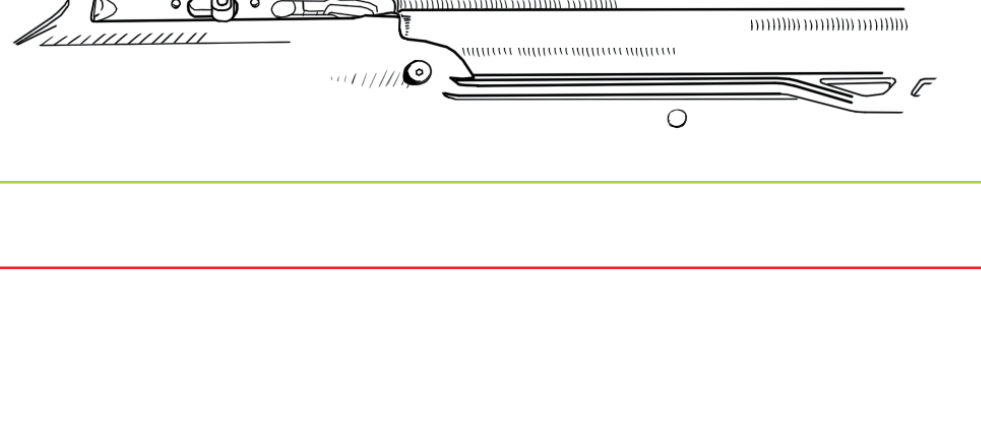

STEP 3-9



STEP 3-10

STEP 3-11

STEP 3-12

STEP 3-13

STEP 3-14

STEP 3-15

STEP 3-16

STEP 3-17

STEP 3-18

STEP 3-19

STEP 3-20

STEP 3-21

STEP 3-22

STEP 3-23

STEP 3-24

STEP 3-25

STEP 3-26

STEP 3-27

STEP 3-28

STEP 3-29

STEP 3-30

STEP 3-31

STEP 3-32

STEP 3-33

STEP 3-34

STEP 3-35

STEP 3-36

STEP 3-37

STEP 3-38

STEP 3-39

STEP 3-40

STEP 3-41

STEP 3-42

STEP 3-43

STEP 3-44

STEP 3-45

STEP 3-46

STEP 3-47

STEP 3-48

STEP 3-49

STEP 3-50

STEP 3-51

STEP 3-52

STEP 3-53

STEP 3-54

STEP 3-55

STEP 3-56

STEP 3-57

STEP 3-58

STEP 3-59

STEP 3-60

STEP 3-61

STEP 3-62

STEP 3-63

STEP 3-64

STEP 3-65

STEP 3-66

STEP 3-67

STEP 3-68

STEP 3-69

STEP 3-70

STEP 3-71

STEP 3-72

STEP 3-73

STEP 3-74

STEP 3-75

STEP 3-76

STEP 3-77

STEP 3-78

STEP 3-79

STEP 3-80

STEP 3-81

STEP 3-82

STEP 3-83

STEP 3-84

STEP 3-85

STEP 3-86

STEP 3-87

STEP 3-88

STEP 3-89

STEP 3-90

STEP 3-91

STEP 3-92

STEP 3-93

STEP 3-94

STEP 3-95

STEP 3-96

STEP 3-97

STEP 3-98

STEP 3-99

STEP 3-100

STEP 3-101

